

# SMART PXL 40 Dot - Installation Guide

High-Resolution Smart 40mm RGB pixel dots.



## Contents

Safety.....	2
Key Electrical Safety.....	2
Electrical Information .....	2
Installation Safety .....	3
Protection From Injury During Installation .....	3
PXL Dot Planning and Specification.....	3
Key Safety & Functional Limits.....	3
Voltage Drop.....	3
Physical Dimensions.....	4
Cable Core Identification Chart .....	6
Maximum Smart PXL 40 Dot Chain Length.....	7
Connection to a 24V DC PSU.....	7
Data Cable Length & Direction.....	7
Control Channels.....	8
Smart PXL Dot Control Options.....	9
Controlling Smart PXL Dots with ENTTEC's OCTO .....	9
ENTTEC OCTO Application Diagram.....	9
Controlling Smart PXL Dots with ENTTEC's PIXELATOR MINI .....	10
PIXELATOR MINI System Application Diagram .....	11
Attaching Smart PXL Dots & Accessories to a Surface or Structure .....	12
Catenary mounting.....	13
Marking The Surface .....	13
Cleaning.....	14
Ordering Information.....	15
Smart PXL Dots.....	15
Smart PXL Dot Accessories.....	15

Safety

Check and respect all directions and warnings given within this installation guide before specifying, installing and operating a Smart PXL Dot installation. If you are unsure or still have any questions about how to install or operate this product safely, please contact your ENTTEC supplier or speak with ENTTEC directly.

Key Electrical Safety



- This product must be installed in accordance with applicable national and local electrical and construction codes by a person familiar with the construction and operation of the product and the hazards involved. Failure to comply with the following installation instructions may result in death or serious injury.
- This device can be damaged by excess voltage. The installation of an overvoltage protection device on the electrical system may reduce the risk of damage.
- Isolate the installation from power immediately if Smart PXL Dots, accessories power cables or connectors is in any way damaged, defective, shows signs of overheating or are wet (if not an IP67 component).
- Do not exceed the maximum numbers of Smart PXL Dots and accessories that can be connected and the maximum cable lengths specified in this guide and other product documentation.
- To reduce the risk of fire or electrical faults do not exceed the ratings and limitations defined in the product datasheet or this guide.
- Do not hot swap Smart Pixel strings or accessories.
- Shut down power to the installation during cleaning in addition to when the installation is not in use.

Electrical Information



- This device operates on DC power and excludes an earth connection.

Input Voltage	24V DC			
Maximum Power per Dot	RGB: 1.6Watts			
Maximum Current Draw per Dot	RGB: 60mA			
Rated Current Throughput Capacity	10A			
Cable Resistance	0.0132 Ohm/m			
Cable Thickness	16AWG			
Connector Type	ATM/ATF (Automotive style Male in/Female out) BET (Bare End Tinned)			
Connector Pinout	Pin 1	Pin 2	Pin 3	Pin 4
	0V	Data	N/C	+24V
Max Operating Ambient Temperature	50°C			

## Installation Safety



- Do not bend the Smart PXL Dot cable into a curve of less than 30mm(1.18in) radius.
- Do not over stretch cabling sections of your Smart PXL Dots.
- Do not operate the Smart PXL Dots if the ambient temperature exceeds 50°C (122°F).
- The Smart PXL Dots are convection cooled, ensure sufficient airflow can reach each dot to allow heat to be dissipated.
- Do not cover or enclose Smart PXL Dots without a suitable and proven method of dissipating heat.
- To contribute to an optimum operating temperature, where possible keep this device out of direct sunlight.
- Do not modify the Smart PXL Dots in any way.
- Follow all steps in the installation guidelines section of this document.

## Protection From Injury During Installation



- Always use suitable personal protective equipment when installing ENTTEC products.
- When installing the Smart PXL Dots above ground level, ensure that the installation hardware and supporting structure can hold the weight of all the devices they support.
- In an overhead installation or where the Smart PXL Dots may cause injury if it falls. Block access below the work area and work from a stable platform whenever installing, servicing or moving the Smart PXL Dots.
- Once installation is completed, check that all hardware and components are securely in place and fastened to supporting structures.

## PXL Dot Planning and Specification

**Before planning or installing your PXL Dot, ensure you are familiarised with all key information within this guide and other relevant ENTTEC documentation. If you are in any doubt about PXL Dot safety, or you plan to install ENTTEC's Smart PXL Dots in a configuration that is not covered within this guide, contact ENTTEC or your ENTTEC supplier for assistance.**

**ENTTEC's Return to Base warranty for this product does not cover damage caused by inappropriate use or application or modification to the product.**

## Key Safety & Functional Limits



Given the versatility and flexibility of the Smart PXL Dot, it is imperative that the PXL Dot layout stays within the limits defined within this document. If two or more different limits apply to a configuration, you must always follow the lowest.

To comply with UL standards, the PXL Dot design and installation must respect the key safety and functional limits defined within this guide.

**These limits are:**

- **Power Draw**
- **Voltage Drop**
- **Current throughput limit per string (10A max)**
- **Control channel availability**


## Voltage Drop

- The longer the cable distance from the power source to each dot the more voltage is dropped. Significant voltage drop can result in lower brightness and in more extreme cases colour shift.
- This is an important consideration for Smart PXL installations with custom pixel pitch and can inform the quantity of dots per string between power injections.
- If cable length can be reduced across your installation, this is recommended.
- If you are concerned about voltage drop and the impact on your installation, contact ENTTEC team or your reseller.


## Physical Dimensions

*Note: Lenses are non-removable & recommended in the absence of protective measure against external impact in installation.*


### Smart PXL 40 Dot - No Lens (73010)

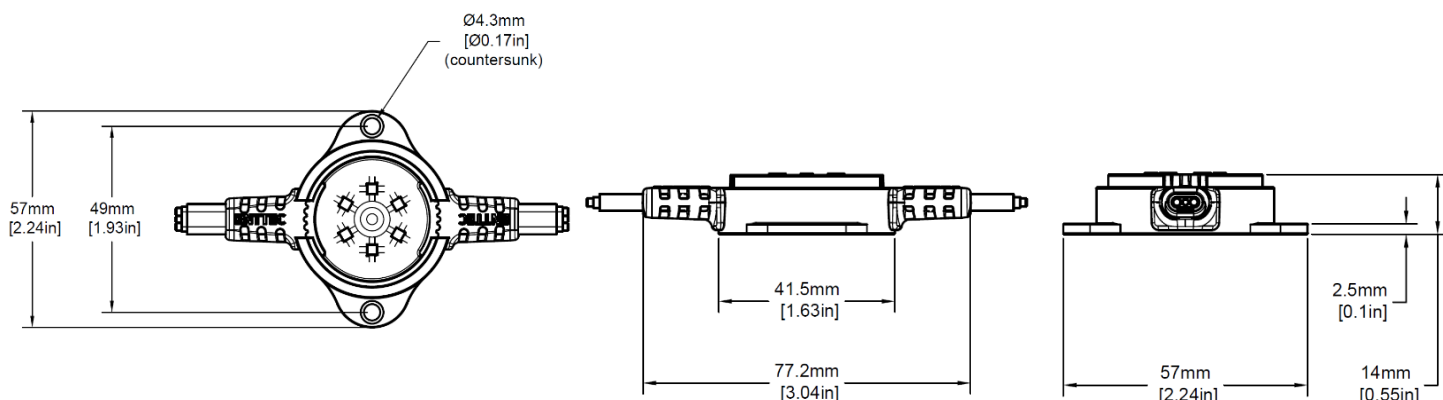


### Smart PXL 40 Dot - Dome Lens (73011)

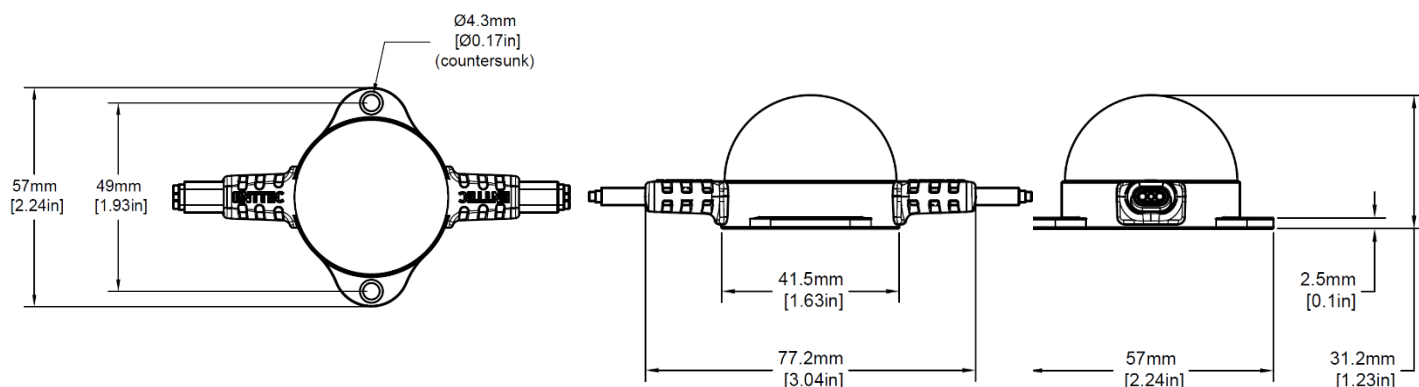

### Smart PXL 40 Dot - Flat Clear Lens (73012)

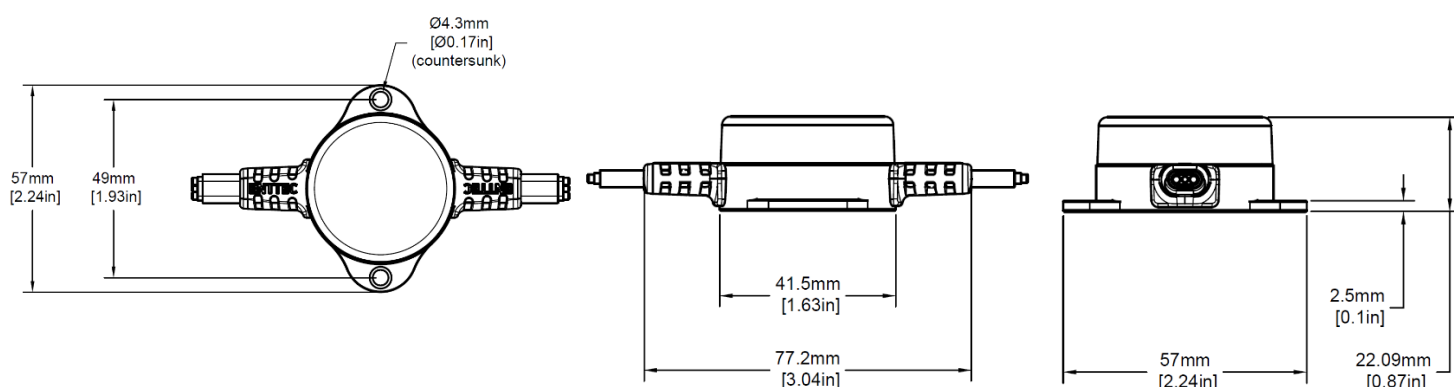


## Premium Connector

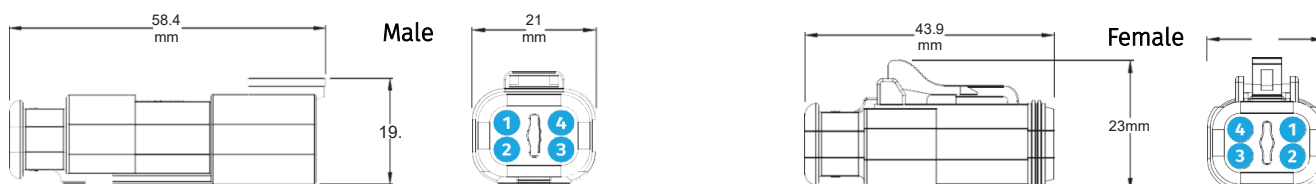

All ENTTEC Smart PXL Dot accessories feature premium IP-rated automotive-style connectors with an integrated latching system. Cables and connectors are reinforced with industrial-grade heat shrink for enhanced durability and long-term reliability. *View each accessory's datasheet for more information.*


## Smart PXL – 2m Male Cable – 24V

Used as a convenient method to connect your Smart PXL Dot's output to a connection block or other device without the need to terminate an Automotive style connector on site.

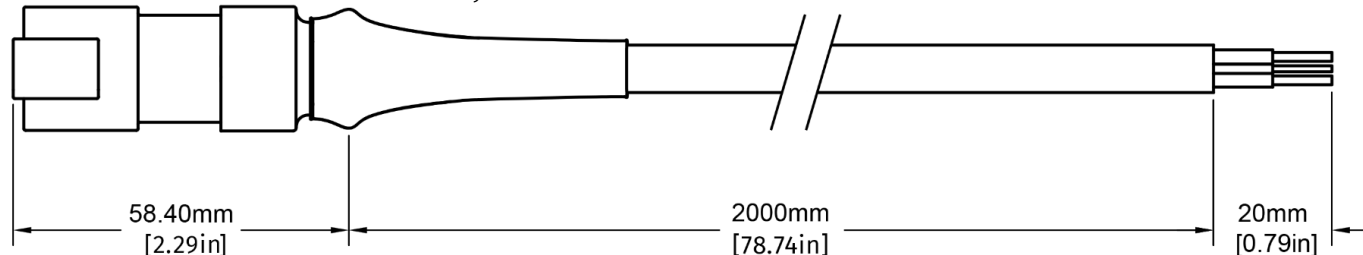


## Smart PXL – 2m Female Cable – 24V

Used as a convenient method to connect your Smart PXL Dot strings to a connection block or other device without the need to terminate an Automotive style connector on site.

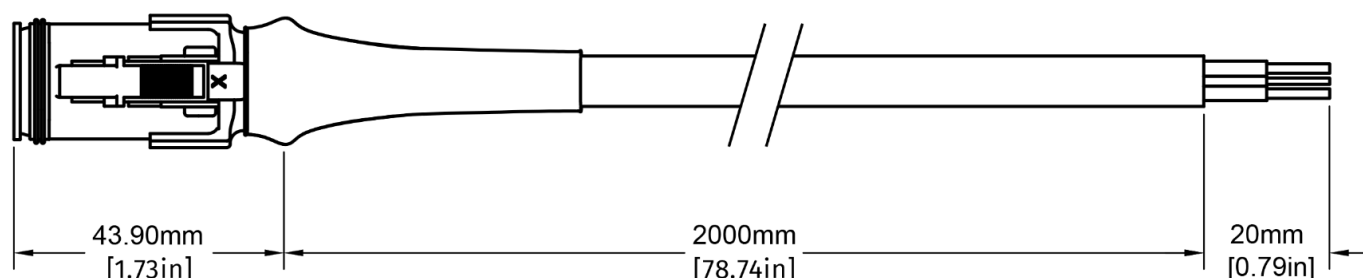


## Smart PXL – Power Injector – 24V

Used as a convenient method to increase the number of Smart PXL Dots by combatting voltage drop. The power injector accessory features reverse polarity and transient voltage protection.

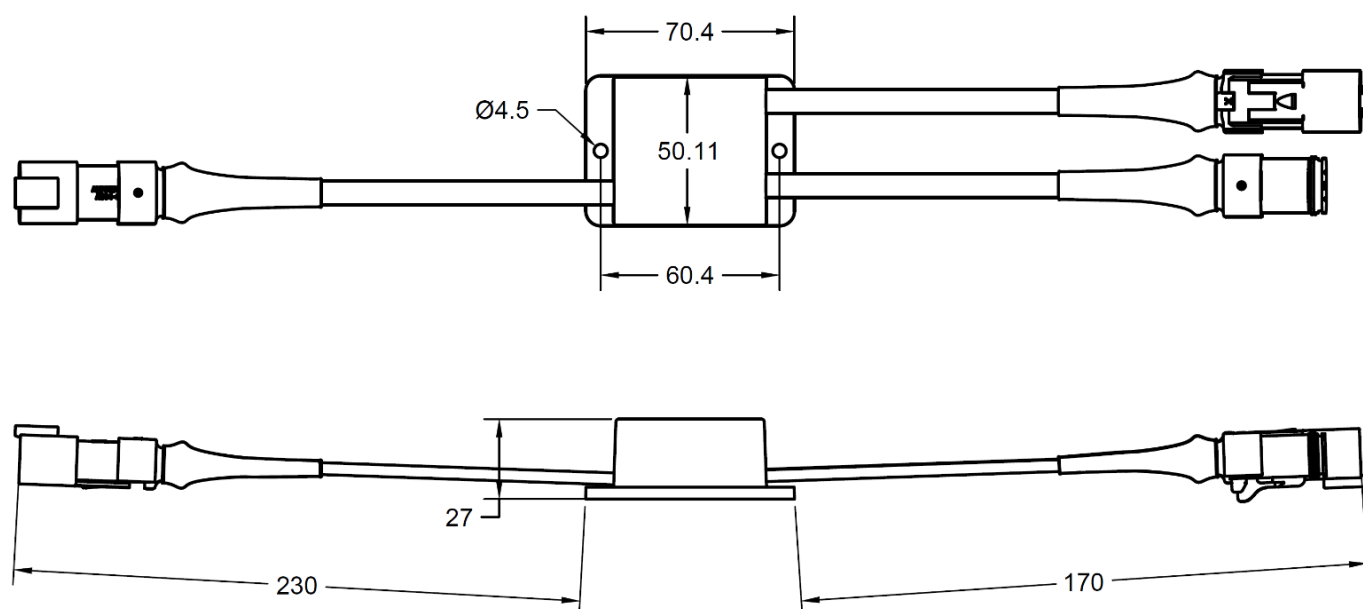


## Smart PXL – 2m Extension – 24V

Used as a convenient method extend the distance between each Smart PXL Dot string. (Never exceed the cable lengths defined within this guide.

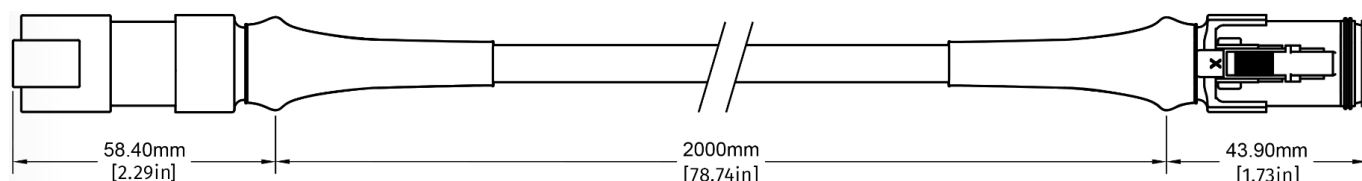


## Smart PXL – Termination End Cap

The Smart PXL Termination End Cap should be attached at the end of a chain of Smart PXL DOTs to protect the final female connector from short circuiting and corrosion in wet conditions. This can be secured to a surface using an m5 screw or bolt.

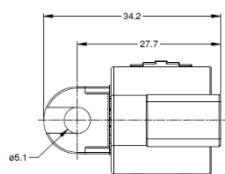


## Cable Core Identification Chart

 Smart PXL DOT string supplied with bare end tined (BET), the pinout is as below:



24V		
Cable colour / AWG size	Function	Pin on Connector
Black (16AWG)	0V	1
Black (20AWG)	Data	2
Black + White stripe (16AWG)	+24V DC	4

Some [accessories](#) are supplied with different cable colour; the pinout is as below:

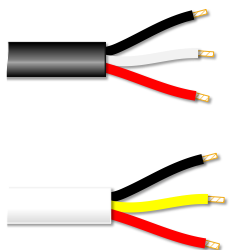


24V		
Cable Colour	Function	Pin on Connector
Black (16AWG)	0V	1
White (16AWG)	Data	2
Red (16AWG)	+24V DC	4

ENTTEC recommend the use of cable ferrules when connecting non-tinned cable.

## Maximum Smart PXL 40 Dot Chain Length

Maximum chain length is determined by voltage drop, power consumption (10A max throughput) and control channel availability.

By using ENTTEC's Smart PXL Power Injector 24v accessory to inject power from additional PSU's, the impact of voltage drop and power consumption can be removed leaving control channel availability as the only limiting factor.

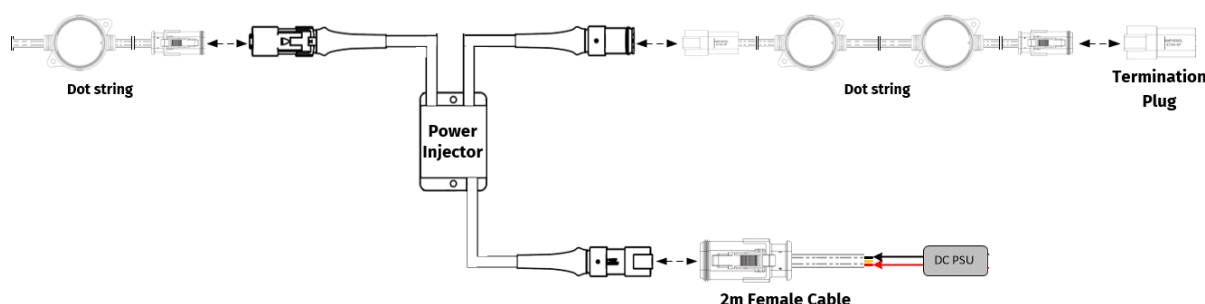

## Connection to a 24V DC PSU

In a Smart PXL 40 installation one or more 24V DC external PSUs (Power Supply Units) are required to provide power to each chain of Smart PXL Dots if your control method doesn't contain an integrated PSU.

Your power supply should be located as close as physically possible to the beginning of the chain of Smart PXL Dots to minimize the effect of voltage drop.

For optimum performance and to reduce the impact of voltage drop, ENTTEC recommend the use of multiple smaller 24v power supplies at the beginning of each run of Smart PXL Dots, instead of a low quantity of high-capacity power supplies with longer connection cables.

ENTTEC recommend IP65 rated or higher power supplies compatible with your installation environment.

The maximum number of Dots that you can safely connect to a PSU is dependent on the selected PSU's power rating.

The total power consumption of a single chain of Smart PXL Dots must not exceed the PSU's maximum power rating OR the 10A current throughput limit of each Smart PXL Dot. To determine the total power consumption of a chain of ENTTEC Smart PXL 40 Dots, add together the power consumption for all individual Dots using the figure given below:



**The total figure must not be above 240W per chain to ensure the 10A power throughput limit of each Smart PXL 40 Dot isn't passed.**

ENTTEC's offers various control system options to drive Smart PXL Dots each designed for different use case scenarios.

Information for each control system type and appropriate wiring methods can be found within the **Control Methods** section of this guide. Ensure all cabling and control systems have been housed in accordance with the specifications defined within each products datasheet and in line with local electrical regulation.

## Data Cable Length & Direction


Smart PXL Dots are controlled using ENTTEC's proprietary S-PXL 16 protocol. This protocol sequentially addresses each Smart PXL Dot automatically. This reduces commissioning time by eliminating the need for individual addressing.

Each Smart PXL Dot contains its own data buffering and data, re-shaping circuit. The maximum permissible distances distance between devices is as follows:

<b>Max. distance between S-PXL 16 data source</b>	<b>3000mm</b>
<b>Max. distance between Smart PXL string interconnects</b>	<b>3000mm</b>
<b>Max. customizable distance between Smart PXL Dots (pitch)</b>	<b>2000mm</b>

S-PXL data can flow through each dot in one direction. This direction is indicated on each string through:

- The direction arrow graphics laser etched into the first and last Dot of each string.
- A direction arrow on each Smart PXL Dot's PCB (visible on non-frosted dome variants).
- The male connector denotes the input end of the string, if your Smart PXL Dots come with pre-attached connectors in default configuration.

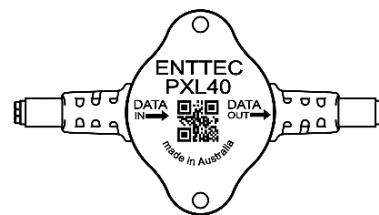

- **S-PXL signal is un-balanced and susceptible to electrical noise. For best practice keep all cable run lengths to a minimum.**
- **Avoid running data cabling close to mains power or devices that emit electromagnetic noise (i.e. air conditioning units).**
- **If data direction instructions are not followed, Smart PXL Dots will not operate.**

## Control Channels

Each RGB Smart PXL Dot consumes the equivalent of 6 DMX channels of data.

The maximum number of dots that can be run from a single data feed is determined by the number of data channels per output.

Each Smart PXL Dot, whether operating in 16-Bit or grouped configuration, will be sequentially addressed one after another in a chain, based on the configuration set by the controller.

### DMX Channel Footprint:

- **16-Bit Smart PXL Dot - RGB**

Channel Order	1	2	3	4	5	6
Attribute	Red	Red Fine	Green	Green Fine	Blue	Blue Fine



**Always consider all limiting factors outlined in this guide before finalizing your system design.**



# Smart PXL Dot Control Options

ENTTEC provides a range of controllers specifically designed to manage Smart PXL Dots, catering to diverse use case scenarios.

Application diagrams showcasing the functionality of select ENTTEC controllers are included in the following section.

**Note:** The controller mentioned in this section are optional and are sold separately. Visit ENTTEC website for the latest information.

## Controlling Smart PXL Dots with ENTTEC’s OCTO

The ENTTEC OCTO Series is a compact, 4-DIN module-wide device designed to convert pixel data from Art-Net, sACN, or KiNet, supporting a wide operating voltage range.


ENTTEC Controller	SKU	Form Factor	Dimming Control Resolution	Outputs per Device	Total DMX Channels Per Output
OCTO MK2	71521	4 module DIN (IP-20)	8-Bit / 16-Bit	2	4096 (8U)

## ENTTEC OCTO Application Diagram

### Key OCTO Installation Guidelines:



- Follow all safety guidelines outlined in this installation guide and related product documentation to ensure compliance and proper functionality.
- Position the OCTO MK2 and power supply at least 460mm (18 inches) away from the luminaire, but as close as possible to the first Smart PXL Dot in the chain to minimise voltage drop.
- To reduce the risk of voltage interference on control signal lines, where possible, route control cabling away from mains power lines or high-EMF-emitting devices (e.g., air conditioning units).
- ENTTEC recommends using cable ferrules for all stranded cables connected to the OCTO MK2’s screw terminals to ensure a secure and reliable connection.

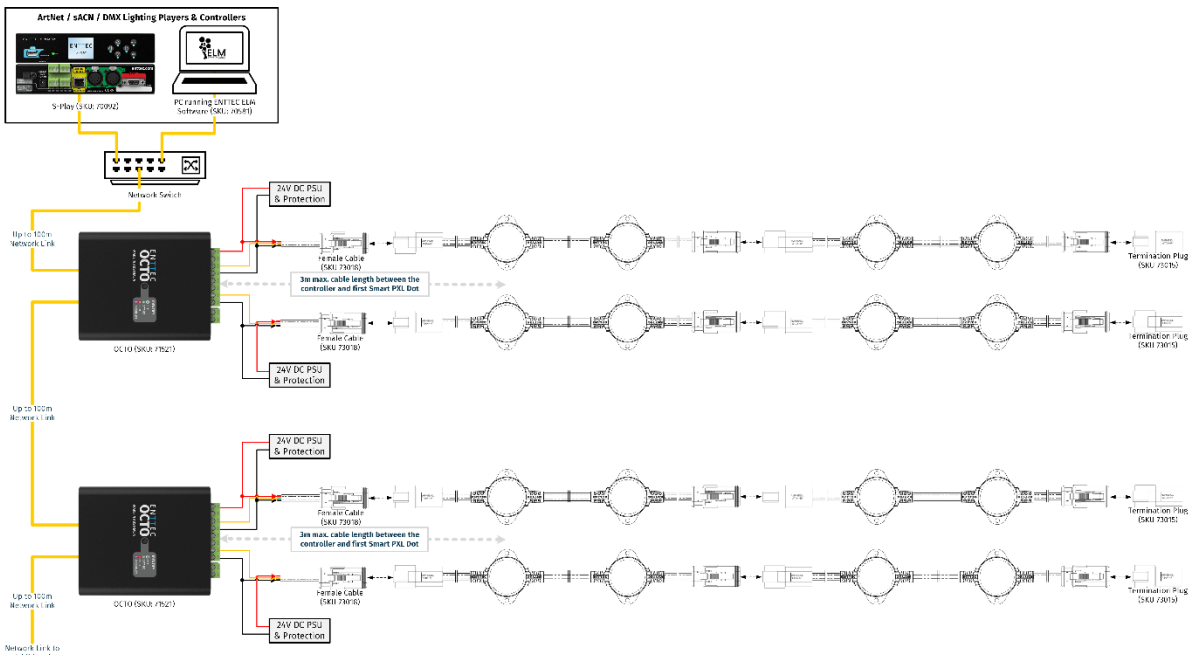

**Note:** If the power or data source to your controller drops out whilst the Smart PXL Dots remain powered, the last state will be held until either the data feed resumes or power to the Smart PXL Dots is disconnected and re-connected.

## Controlling Smart PXL Dots with ENTTEC's PIXELATOR MINI

The PIXELATOR MINI is an installation-grade hub that simplifies LED pixel dot and strip control. As part of ENTTEC's PLink system, it provides 8 Ethernet ports for SPI pixel conversion using PLink Injectors, handling up to 32 universes of Art-Net, sACN, and ESP with data integrity up to 300m.

### PIXELATOR MINI Devices

Each PIXELATOR MINI device is configurable via web interface over a local network and converts DMX over ethernet (Art-Net, sACN or ESP) to ENTTEC's proprietary PLink protocol designed to send control data over long distances. Each PLink output can send data up to 300m over CAT6 cable to ENTTEC's PLink injector modules.



ENTTEC Controller	SKU	Form Factor	Dimming Control Resolution	Outputs per Device	Total DMX Channels Per Output
PIXELATOR MINI	70067	9.5" Rack 1RU (IP-20)	8-Bit / 16-Bit	8	2048 (4U)



**Do not mix controller types within a P-Link System. Different PIXELATOR MINI models use different processing power appropriate to the hardware design. If your installation requires multiple PIXELATOR MINIs, standardise on one variant to eliminate the risk of content tearing.**

### PLink Injection Modules

ENTTEC's compact PLink power injection modules are available in both indoor and outdoor variants. These surface mount modules convert PLink signal from the PIXELATOR MINI to the SPXL16 protocols without configuration. The two variants compatible with Smart PXL Dots are as follows:



ENTTEC Injection Module	SKU	IP Rating	Data Outputs per Device
Plink Injector (12-24v/5v)	73544 / 73546	IP-20	1
IP66 Plink Injector (custom / made to order item – <i>contact the ENTTEC sales team</i> )	73924	IP-66	1


For more information on the products & accessories featured within this guide visit [enttec.com](http://enttec.com)

## PIXELATOR MINI System Application Diagram



### Key PIXELATOR MINI System Installation Guidelines:

- Ensure all safety guidelines within this guide and other product documentation are factored into the design.
- Locate the PLink and PSU as close as possible to the first Smart PXL Dot in the chain to reduce the impact of voltage drop.
- To reduce the likelihood of voltage being induced on the control signal lines, where possible, run control cabling away from mains electricity or devices that produce high EMF, (i.e. air conditioning units).
- ENTTEC recommends the use of cable ferrules for all stranded cables connected to the PLink's screw terminals to ensure a reliable connection.

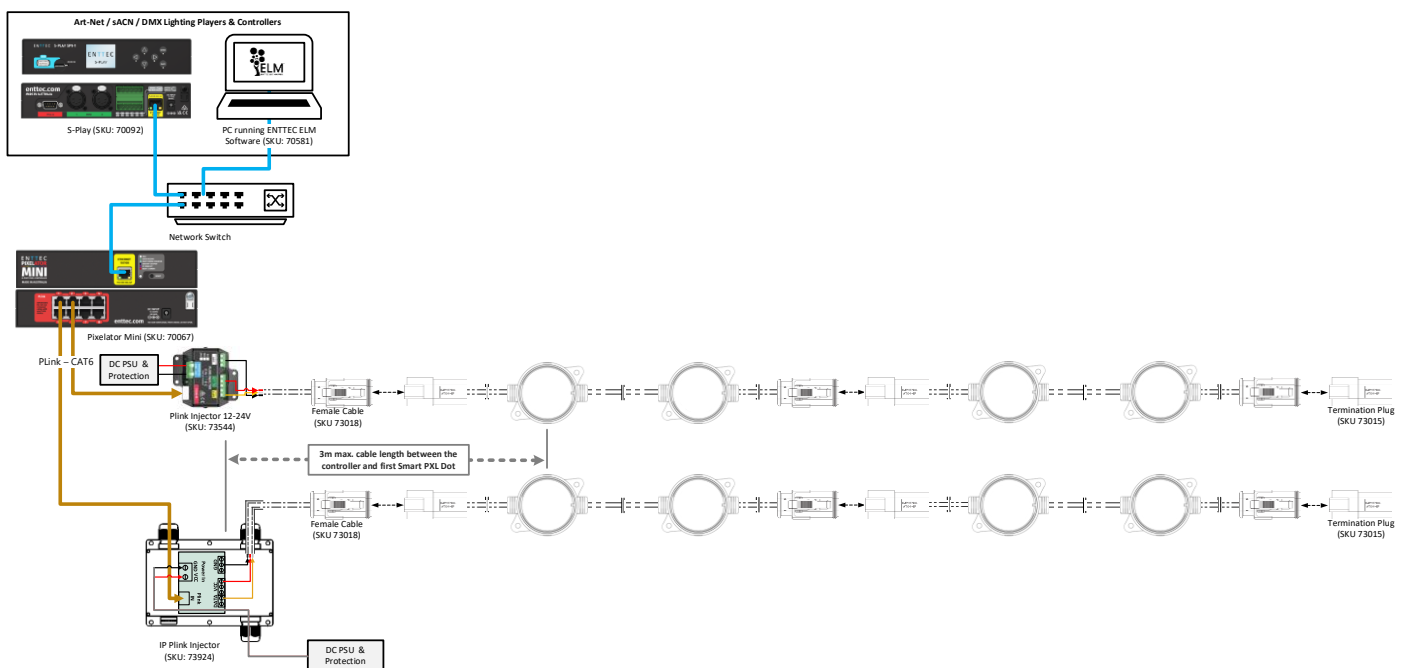

**Note:** If the power or data source to your controller drops out whilst the Smart PXL Dots remain powered, the last state will be held until either the data feed resumes or power to the Smart PXL Dots is disconnected and re-connected.

## Installation Guidelines

Always work with a plan of the installation that respects all system limitations as defined within this guide and adheres to the safety information.

Keep Smart PXL Dots and their accessories in their protective packaging until final installation.

Note the serial number of each Smart PXL Dot string and add it to a layout plan of your installation for internal reference.



- **Ensure data flows from your controller through the string of dots following the data direction marked on the first and last Smart PXL Dot in the chain.**
- **Do not cover Smart Pixel Dots with insulating material of any kind.**
- **When installing dots or accessories DO NOT exert any tension on the cabling whilst tightening.**



- **Installation of this product must be performed by qualified personnel. If ever unsure always consult a professional.**
- **Ensure that no part of the installation is or can be connected to power until all work is complete.**
- **Do not install Smart PXL Dots if the lens, metalwork, or cabling is damaged.**
- **Before connecting Smart PXL Dots to a power supply, verify that the operating voltage and frequency are compatible and the power supply is appropriately fused in.**
- **Do not crush or clamp Smart PXL Dot or accessory cabling during installation.**
- **Do not leave connections unprotected or disconnected in damp or wet environments. All exposed connectors should be fitted with a Termination Plug (SKU 73015) to give a watertight seal to protect against corrosion.**
- **Do not handle Smart PXL Dot strings in an energized state.**
- **Do not bend the Smart PXL Dot or accessory cabling to a radius smaller than 30mm.**
- **Do not 'hot swap' Smart PXL Dot strings or their accessories.**
- **Do not leave connectors or accessory cabling in a position where they could cause a short circuit.**
- **Isolate the installation from power immediately if Smart PXL Dots, accessories power cables or connectors is in any way damaged, defective, shows signs of overheating or are wet (if not an IP65 component).**
- **Do not sign off a system without ensuring all Smart PXL Dot and accessory cabling is appropriately restrained, secure and not under tension from the way it has been installed.**

## Attaching Smart PXL Dots & Accessories to a Surface or Structure


The Smart PXL 40's body features 2 \* M4 holes with 49mm spacing designed for use with bolts, machine screws or self-tapping screws rated to support the weight of the full Smart PXL Dot string.

Cable termination end caps (sku:73015) feature a single M5 hole for use with pan head screws and bolts.

ENTTEC produces Smart PXL Dot cable accessories for increased convenience on site. All accessories use the same cabling and connectors as the Smart PXL Dot's. Cabling should be restrained with cable clips every suited to the surface you are mounting your Smart PXL installation to every 0.5m.

Accessories should be used in-line with the system design considerations of your selected controller and adhere to the system cable length limitations in this guide.


Ordering information can be found at the end of this document. For custom pixel pitch or accessory cable length contact the ENTTEC sales team.

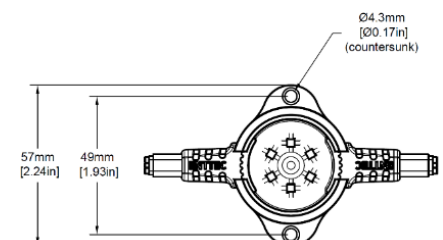

## Catenary mounting

ENTTEC recommends UV resistance, outdoor-use rated Nylon cable tie for 2 wire catenary support of the SmartPXL dots via the mounting holes to eliminate any rotational stress. Do not position cable ties directly over any cable overmould or heatshrink covered connections. Positioning cable ties over these components will prevent them from acting as strain relief for the system and may void the warranty.

If the pitch cable is sagging and needs to be restrained for aesthetic purposes, a cable tie can be used but should be positioned as far away from the overmould or heatshrink parts as possible. Do not tighten the cable tie tight to the catenary cable as this will prevent the system from flexing and dampening strain on the cable. It can also cause the cable to rub against the catenary wire and wear away the insulation.

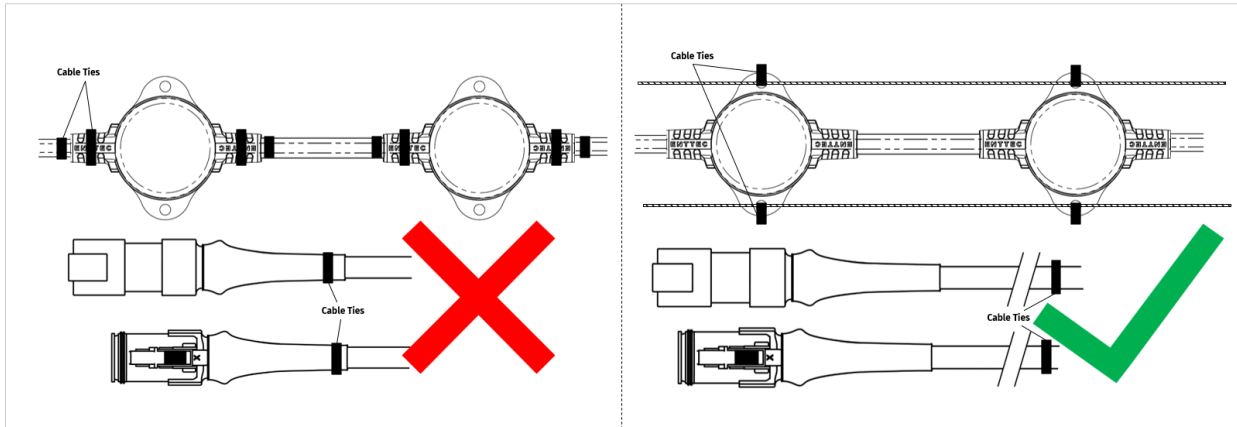

**Ensure the surface you are attaching Smart PXL Dots and accessories to is either fully electrically insulated or electrically earthed and can support the weight of all items you attach.**



- Only drill holes or tighten screws into a surface that do not have cabling, pipework or other services directly behind.
- Never energize a Smart PXL Dot system until installation is complete and it is safe to do so.
- When mounting Smart PXL Dots and accessories, ensure the mounting method is suitably rated to support the weight of the full Smart PXL Dot string.
- Never drill a hole or tighten screws into a surface using a Smart PXL Dot or accessory as a guide. This can result in damage and compromise the strength of the product.
- If installing Smart PXL Dots outdoors, only use corrosion proof galvanized, or stainless-steel fixings rated for the installation conditions.
- Never allow a string of dots to hang from a structure during installation, this can result in strain to cabling and damage to the Smart PXL Dots.

## Marking The Surface

Hold a Smart PXL40 Dot or your Cable termination end cap up to the surface and accurately mark the hole positioning with a pencil, ensuring that the spacing between each dot and accessory will not exert any strain on the Smart PXL Dot cable.

Protect the Smart PXL Dot's from debris or swarf whilst drilling pilot holes.

**Note:** When installing, **DO NOT** connect the Smart PXL Dot cabling until the screw has been fully tightened to protect it from any un-necessary strain.

### ■ Screws

If securing Smart PXL Dots or accessories using machine or self-tapping screws.


Drill a pilot hole or partially wind a self-tapping screw on the pencil mark as defined in the previous section before positioning the Smart PXL Dot. Position each Smart PXL Dot in-line with the entry points, then insert and fully tighten the screws.

**DO NOT** exert any tension on the cabling whilst tightening.

### ■ Bolts

If securing Smart Pixel Dots using bolts, ensure a locking nut is used that cannot become undone due to vibration.

**DO NOT** exert any tension on the cabling whilst tightening. ENTTEC recommend the use of washers.

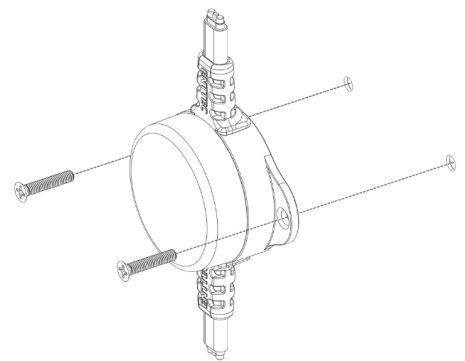

## Servicing, Inspection & Maintenance



- **Servicing, inspection & maintenance should only be carried out by qualified technicians familiar with all safety information within this document and the Smart PXL Dot system.**
- **Smart PXL Dots and accessories have no user serviceable parts. If your installation has become damaged parts should be replaced.**



- **Power down the entire system and ensure a method is in place to stop the system from becoming energized during Servicing, Inspection & Maintenance.**

Key areas to examine during inspection:

- **Ensure all connectors are mated securely and show no sign of damage.**
- **Ensure all connectors show no sign of corrosion.**
- **Ensure all cabling has not obtained physical damage or been crushed.**
- **Ensure all Smart PXL Dots and accessories are secured to the surface and have been installed in accordance to the guidelines set out within the installation guide.**
- **Check for dust or dirt build up on the Smart PXL System and schedule cleaning if necessary. – Dirt or dust buildup can limit the ability for the Smart PXL Dot system to dissipate heat and can lead to damage.**

If deemed necessary for a Smart PXL Dot string or accessory to be replaced, it should be removed in a reverse order to installation as defined in this guide.

The replacement string or accessory should be an appropriate size and be installed in accordance with all steps within the installation guide.

To order replacement parts contact your reseller or ENTTEC directly, making sure to quote the serial number laser etched into either the first or last Smart PXL Dot in each string you intend to replace. This can be used to determine the precise specification or any customization options that are applicable

## Cleaning

Dust and dirt build up can limit the ability for the Smart PXL Dot system to dissipate heat resulting in damage. It's important that the Smart PXL Dot system is cleaned in a schedule fit for the environment it is installed within to ensure maximum product longevity.

Cleaning schedules will vary greatly depending on the operating environment of your Smart PXL Dots. Generally, the more extreme the environment, the shorter the interval between cleanings.



- **Before cleaning, power down the system and ensure a method is in place to stop the system from becoming energized until cleaning is complete.**



- **Do not use abrasive, corrosive or solvent-based cleaning products on a Smart PXL Dot system.**
- **Do not spray Smart PXL Dots or accessories with a high-pressure water jet.**

To clean an ENTTEC Smart PXL 40 system, use low-pressure compressed air to remove dust, dirt and loose particles. If deemed necessary, wipe the Smart PXL Dots with a damp microfiber cloth.

A selection of environmental factors that may increase demand for frequent cleaning include:

- Use of stage fog, smoke or atmospheric devices.
- High airflow rates (i.e. in close proximity to air conditioning vents).
- High pollution levels or cigarette smoke.
- Airborne dust (from building work, the natural environment or pyrotechnic effects).

If any of these factors are present, inspect all elements of the system soon after installation to see whether cleaning is necessary, then check again at frequent intervals. This procedure will allow you to determine a reliable cleaning schedule for your installation.

## Ordering Information

### Smart PXL Dots

Product	SKU
Smart PXL 40 Dot – No Lens	73010
Smart PXL 40 Dot – Dome Lens	73011
Smart PXL 40 Dot – Clear Flat Lens	73012

*Please refer to datasheet or contact ENTTEC team to discuss your customisation and installation requirements.*

### Smart PXL Dot Accessories

Product	SKU
Smart PXL – Termination End Cap (pack of 5)	73015
Smart PXL – 2m Male Cable - 24v	73017
Smart PXL – 2m Female Cable - 24v	73018
Smart PXL – Power Injector - 24v	73026
Smart PXL – 2m Extension Cable - 24v	73020

*Please refer to datasheet or contact ENTTEC team to discuss your customisation and installation requirements.*

# enttec.com

MELBOURNE AUS / LONDON UK / RALEIGH-DURHAM USA / DUBAI UAE

*Due to constant innovation, information within this document is subject to change.*